



# Plasma TV

Chassis : F71B(P\_HD)\_C43X  
Model Code : PS42C430A1WXXC

## ***SERVICE*** Manual

### Plasma TV



PS42C430A1W

### CONTENTS

1. Precaution
2. Product Specification
3. Disassembly & Reassembly
4. Troubleshooting
5. Exploded View & Part List
6. Wiring Diagram

Refer to the service manual in the GSPN (see the rear cover) for the more information.



#### **GSPN (Global Service Partner Network)**

<b>Area</b>	<b>Web Site</b>
North America	service.samsungportal.com
Latin America	latin.samsungportal.com
CIS	cis.samsungportal.com
Europe	europe.samsungportal.com
China	china.samsungportal.com
Asia	asia.samsungportal.com
Mideast & Africa	mea.samsungportal.com

This Service Manual is a property of Samsung Electronics Co.,Ltd. Any unauthorized use of Manual can be punished under applicable International and/or domestic law.

© Samsung Electronics Co.,Ltd. **Mar. 2010**  
Printed in Korea  
**AA82-06325A**

---

# Table of Contents

---

## 1. Precaution

1-1	Safety Precautions .....	1-1
1-2	Servicing Precautions .....	1-3
1-3	Static Electricity Precautions.....	1-4
1-4	Installation Precautions.....	1-5

## 2. Product Specification

2-1	Product Feature .....	2-1
2-2	Specifications Analysis.....	2-12
2-3	Detail Factory Option .....	2-16
2-4	Accessories.....	2-17

## 3. Disassembly & Reassembly

3-1	Overall Disassembly & Reassembly .....	3-1
-----	--	-----

## 4. Troubleshooting

4-1	Checkpoints by Error Mode.....	4-1
4-2	Adjustment .....	4-13
4-3	Upgrade .....	4-30

## 5. Exploded View & Part List

5-1	Exploded View .....	5-1
5-2	Service Item .....	5-3

## 6. Wiring Diagram

6-1	Overall Wiring.....	6-1
-----	---------------------	-----